




PM • INTERNATIONAL
FURNISHINGS

INSTALLATION HANDBOOK 2023

STEP 01

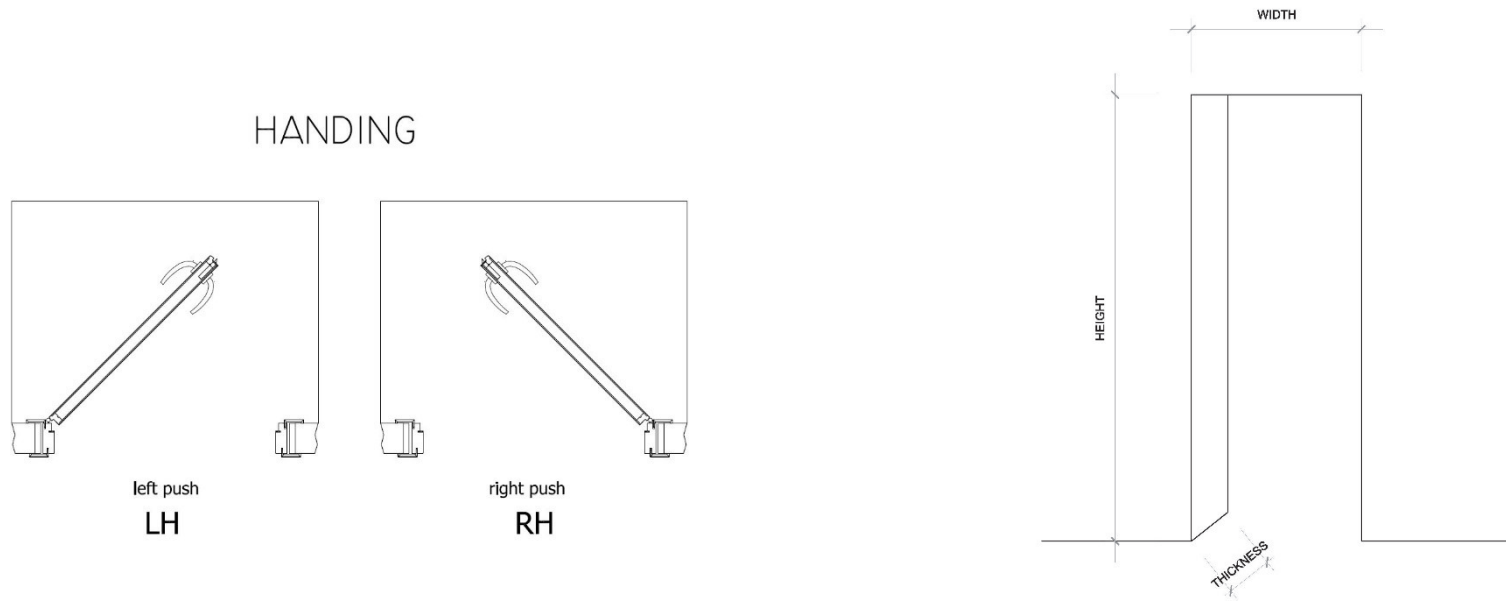

Check the opening on the wall, if it's all right to fix the door (dimensions, level and solid fixing points).

STEP 02



Collect the correct door, 1 set of door closer including the frame metal plate, 1 door viewer.

STEP 03



The door must be standing up. Unwrap it and be careful when using sharp items not to cause damage to the door frame! Keep the thick cardboard protection and the corner protection, and tape them on the door after the inspection.

Hold the door in place using wedges on both sides

STEP 04



Make sure it's levelled, square and in the right position according to the walls.

STEP 05




Remove the black flat gasket from the door frame (temporary held in place with masking tape).

STEP 06



Drill through the 9 pre-drilled holes with a 4mm pilot.

STEP 07

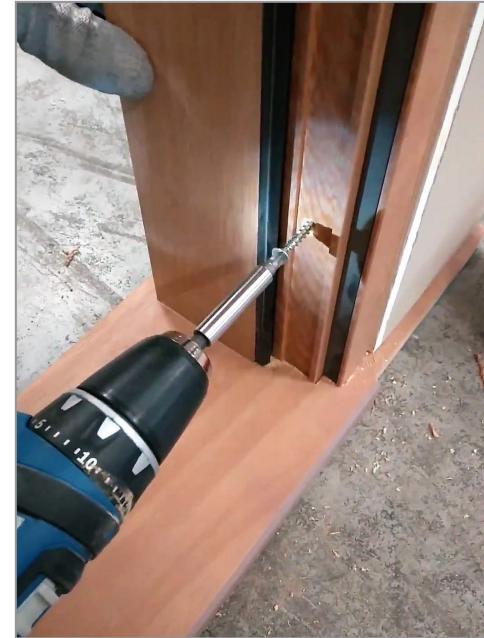

Use packers as needed and then fix the frame with 9 fully-threaded countersunk screws.

STEP 08



Stick the black flat gaskets to the frame using the pre-applied adhesive after removing the paper cover strip. Be aware that they have to stay perfectly inside the pre-cut groove. And control that all soft rubber seals are well positioned all around the perimeter.

STEP 09



Check the 45° angle and alignements.

STEP 10




Fix the door closer mechanism internally with the provided screws, using only the pre-drilled marks on the door leaf.

STEP 11



Fix the metal plate for the rail on the frame, using the stainless steel screws provided separately, where there are pre-drilled marks.
Then the rail on the plate following the instruction of the door closer set.

STEP 12

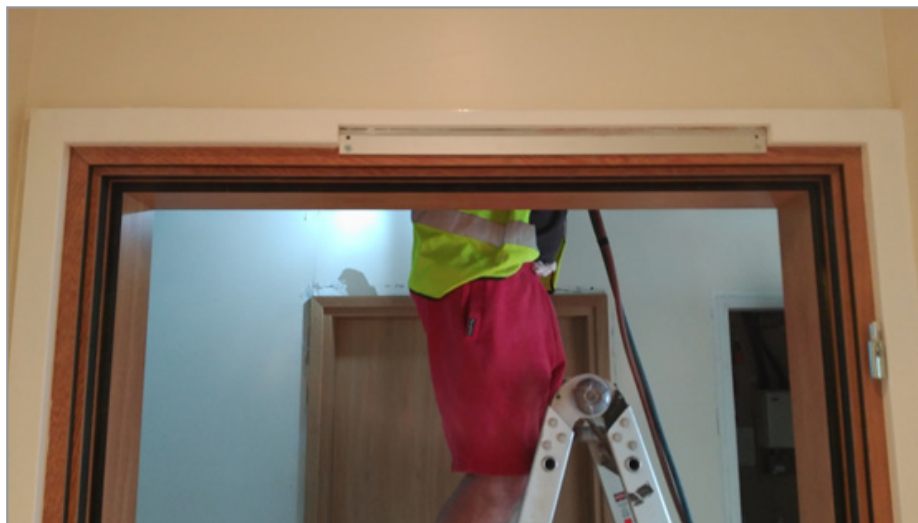

STEP 13



Install the door viewer by hand.

STEP 14



Always use fire-rated acoustic foam to fill the gap between the frame and the wall edge.


STEP 15



Have a final check if the door is working correctly and all it's fine.

Use a low tack masking tape to apply the cardboard protection as well as the corner protectors to the door and frame.

STEP 16

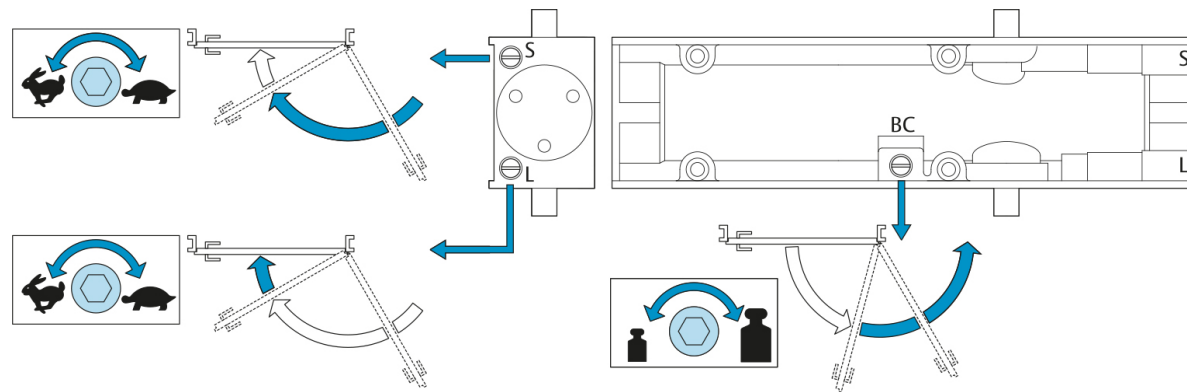

Adjust the speed and the shut on the door closer box, following the instructions that are included.



PLEASE NOTE:
THAT THE FIRE CERTIFICATION LABELS CAN BE FOUND ON THE TOP EDGE OF THE DOOR LEAF

SERVICE DUCT TYPE12 & TYPE13 DOORS PLEASE NOTE:
THE FRAMES FOR THESE DOORS ARE FINISHED IN A SPECIAL LAMINATE WHICH IS READY FOR PRIMER PAINT APPLICATION